



QuickFree[®]




QuickFree®



Smart insertion and quick release function in one zipper.


"QuickFree" Zipper won "Prime Minister Award" which is the Grand Prize of Kids Design Award 2018 and Good Design Award 2018 Gold Award.

1 Smart Insertion

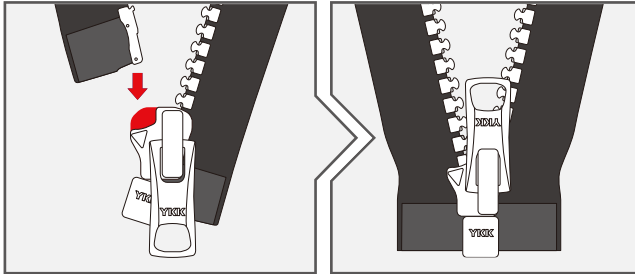

Enlarged bottom part of slider body (highlighted in red) allows quick and easy insertion of the separable pin into the slider.

2 Quick Release

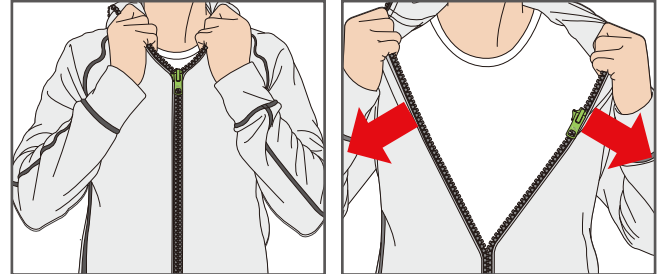

The zipper can be opened by simply pulling apart the garment or pulling the zipper chain sideways.*

*Pull the zipper apart above the slider. The zipper cannot be opened by pulling the part below the slider.

Item Variations

	Closed	Open	Two-way	Chain
5VS	-	○	*	-

*Please contact YKK sales representative about the two way separator.

Slider

NAMR2* (Right insertion) / NAML2* (Left insertion)

EB, EW & EX paintings are available.

*Asymmetrical plastic slider

Minimum Lot

None

Color Variation


Color variation is the same as standard VISLON® zippers.

Usage scenes


Easy for children to use



Easy for parents to use to dress a child

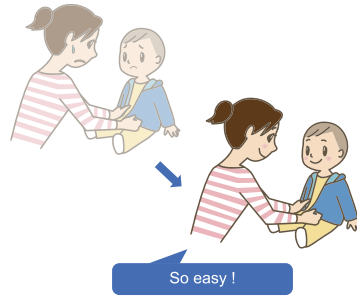

Quick release function lightens load

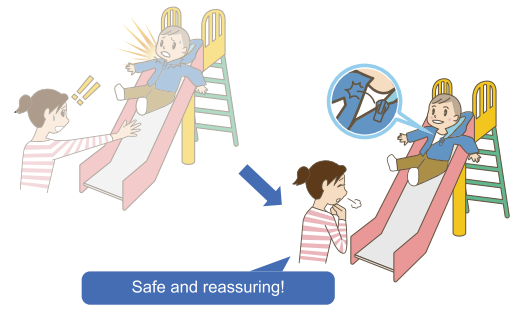

*Release function has been shown to reduce the risk of suffocation when clothing gets caught around the neck. It does not necessarily guarantee accident or injury prevention.

Caution

- There is the possibility that the zipper might open unexpectedly if used on a heavy weight garment.
- Ensure product is completely closed when placing into a washing machine or dryer. A partially closed zipper may become entangled with other items, resulting in damage to the elements, slider or other components.
- Do not add an excessive load. It may cause damage to the cloth and zipper.
- If the QuickFree® slider gets stuck on a flap or a chin guard, or if the slider, when stuck, is pulled further with excess load, the slider may be damaged or broken.

This zipper slider is asymmetrical.
If a regular zipper is attempted to be opened in the same way, it might damage the zipper.

